

E-Series

EZ Remote Setup Guide



19th Apr 2016

Security Systems Business Division

Panasonic System Networks Co., Ltd.

Panasonic

<NOTICE>

This document is supplementary to the operation manual.

Depending on the firmware version used for E-Series NVR and management software(EMS/Mobile EMS), the screens may differ from the actual screens.

Setup on NVR



Setup on Mobile Device / PC

Setup Procedure on NVR

Precondition

The firmware of NVR need to be "V3.200.PSSN.3.R 20160408" or later version.
NVR is connected to internet router



1. Check "Enable"

3. Confirm connection status change to "Online"




Precondition


Install Mobile EMS from Google Play(Android mobile) or Apple store(iOS mobile) or update your mobile EMS to latest version




1. Click "Device List" button

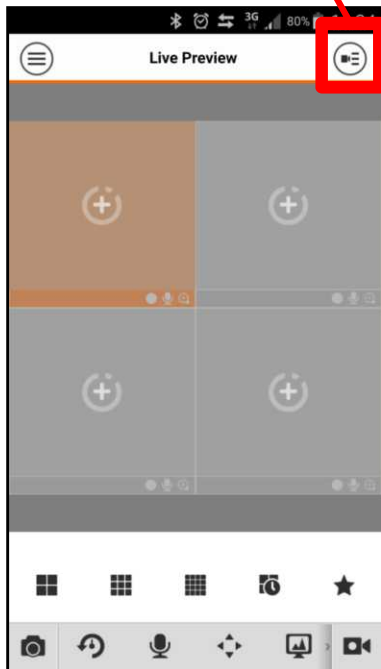

2. Click "Add Device" button

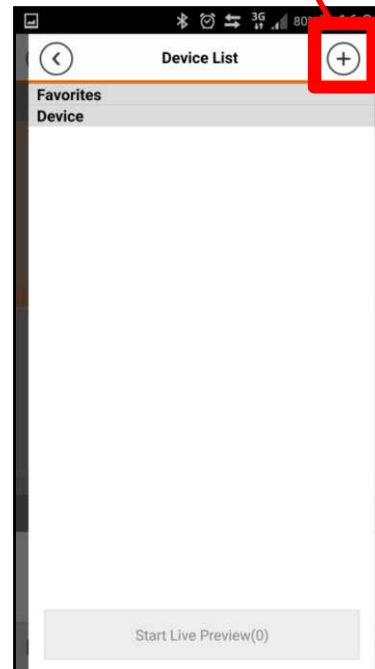


3. Select "EZ Remote"

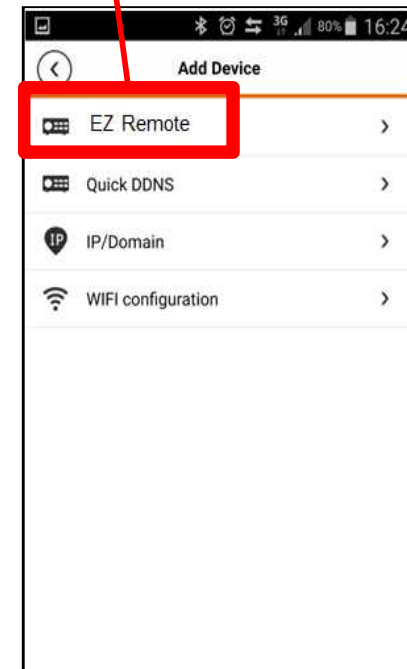




4. Input your desired name

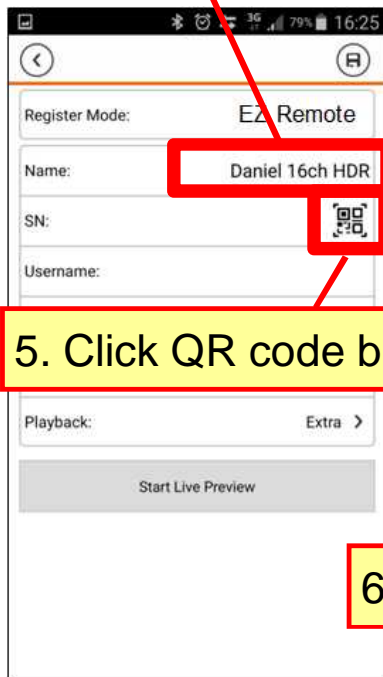


5. Click QR code button

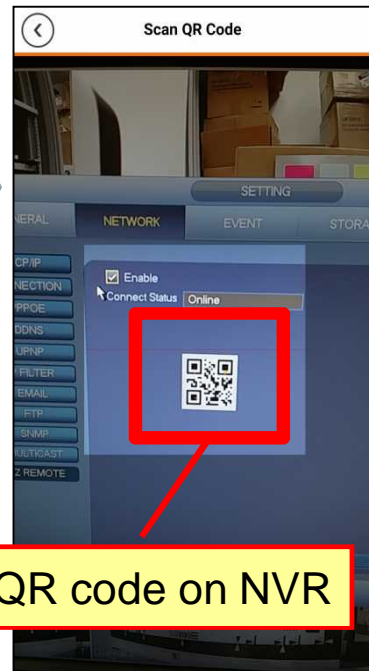

6. Scan QR code on NVR

7. Input user name / password

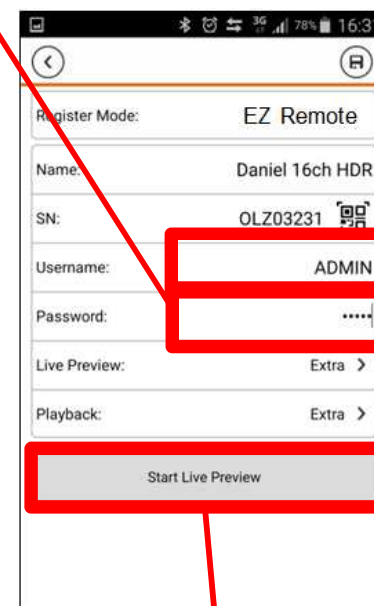

8. Click "Start Live Preview"

<Live View>




Setup Procedure on PC(1/2)

Install EMS software from web site on Windows PC

Precondition

The software version of EMS need to be "1.12.1" or later version.


PC is connected to internet

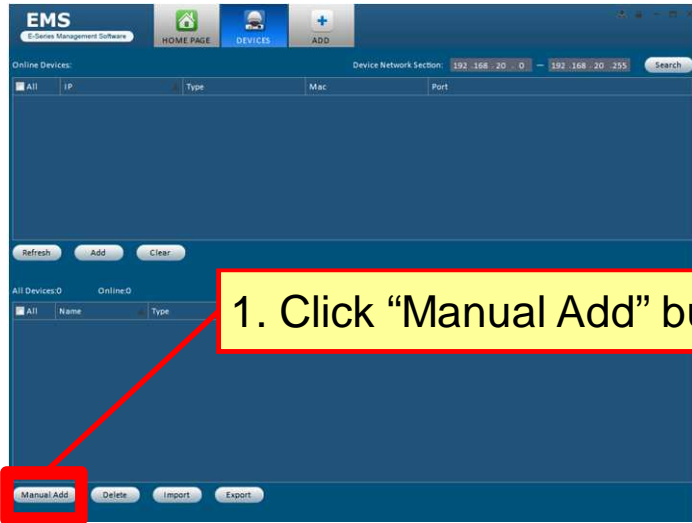

1. Click "Manual Add" button

(*) Serial number of NVR can be found at
NVR menu -> INFO -> SYSTEM-> VERSION


3. Input following NVR info
serial number(*)/user name/password

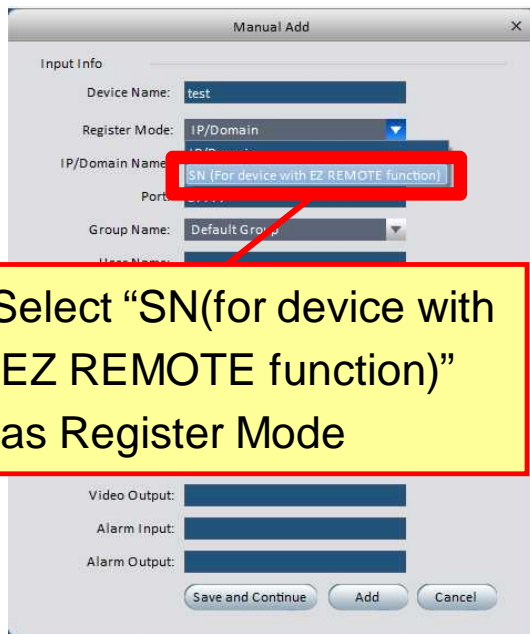

2. Select "SN(for device with
EZ REMOTE function)"
as Register Mode



4. Click "Get Info" button

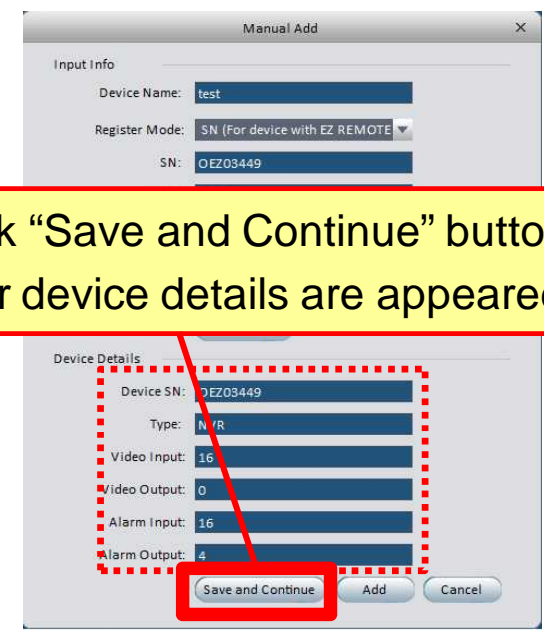

5. Click "Save and Continue" button
after device details are appeared

6. Close "Manual Add" window



<Live View>

All	Name	Type	IP/Domain Name	Port	Channel No.	Online	SN	Operation
1	test	NVR	OEZ03449	37777	16/0/16/4	Online	OEZ03449	✖

Panasonic